





## Cejipac Sdn. Bhd.

### Container Loading & Securing Plan For Palletised Cargo Option 3

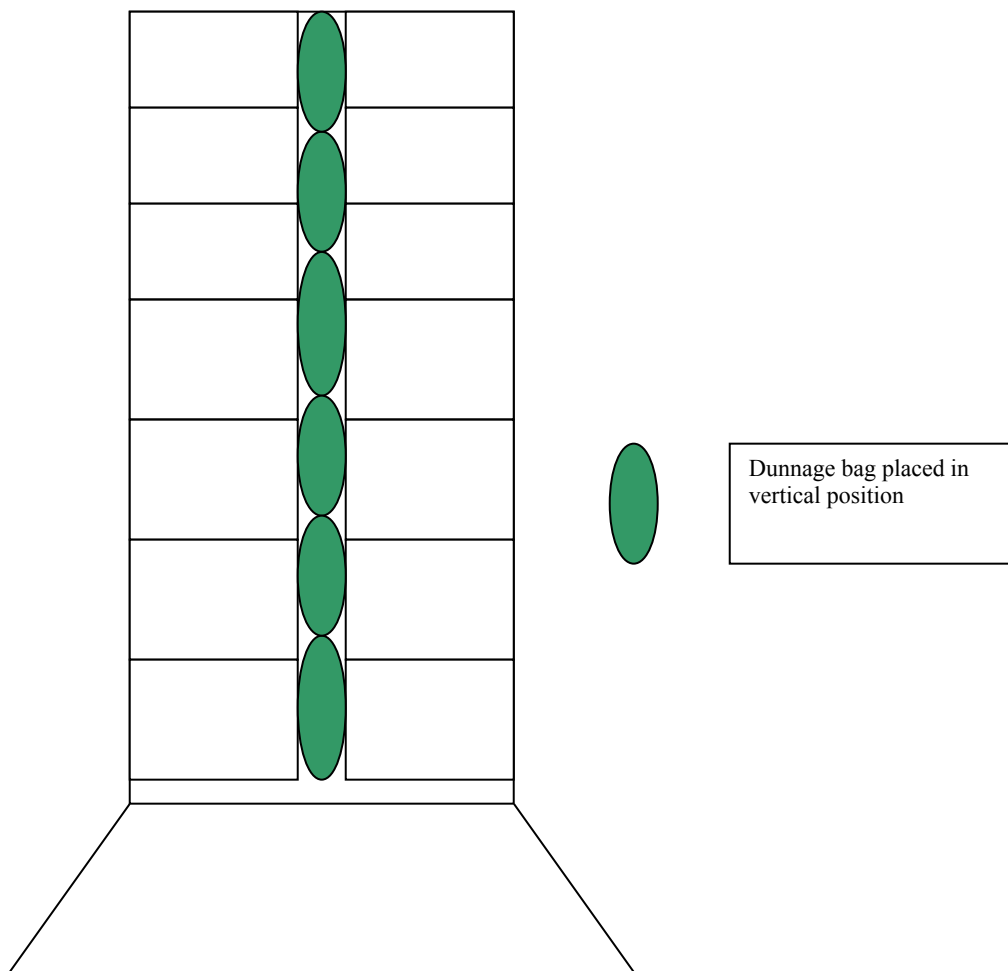

Plan View

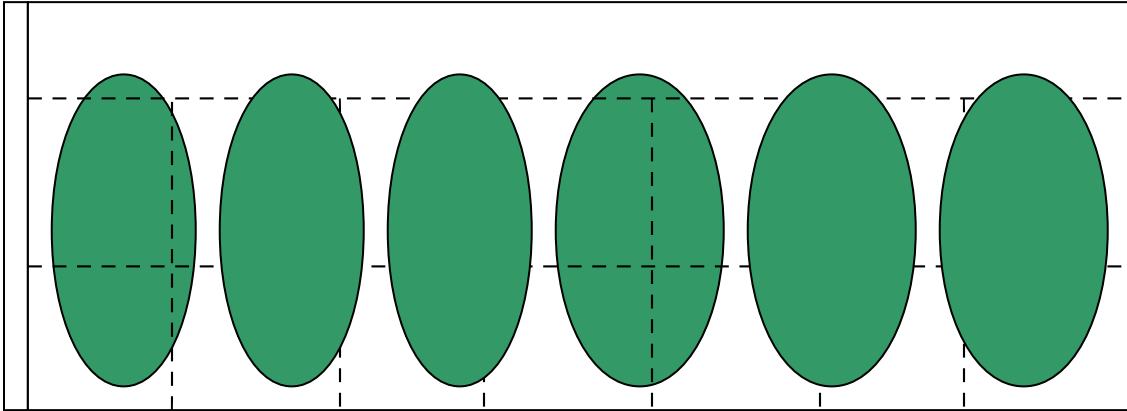

Side -View

Cargo Details And Securement Plan:

1. Palletised with corner posts and shrink wrapped
2. Size: 1000 x 800 x 1000(h) mm
3. Estimated weight : 500kg/pallet
4. Loading plan: 7 rows and 2 layers with gap( approx 35cm) down the middle of container
5. Plan to use 6pcs of 90x 180cm wpp dunnage air bags for securement. The bags are placed in the vertical position right down the middle between the two columns of pallets.

Loading and securing steps:

1. Ensure that all the pallets are touching each other and the container walls during loading .Continue to load all the pallets have till finished.
2. One dunnage bag is placed in vertical about 10cm from the end wall of the container and at the height of top layer pallet . The bag must not protrude above the palletized cargo by more than 15cm.
- 3 Sandwich the dunnage bag between two pieces of cardboard( used or new) to prevent puncture by sharp protrusion from the pallet or strapping seals .
- 4 Inflate the dunnage bag till the pallets on both sides are very tightly wedged against the container walls or you just start to hear the container wall starting to creak .
- 5 Leave a space of about 10cm and place another bag vertically . Place it in such a way that the top of the bag protrude from the top of the cargo by about 10-15cm..

- 6 Sandwich the bag between 2 cardboards and inflate till the pallets at the sides are tightly wedged against the container walls.
- 7 Move about 10cm away and repeat Step 2 with another dunnage bag placed in a vertical position.
- 8 Repeat Step 5 till the last dunnage bag which will be vertically at the door end of the container.